


TOOLCUT | PUNTE A CENTRARE NC HSS- E COBALTO

PUNTE A CENTRARE NC HSS - E Co - 90° - 120°

ISO 10898

CODICE 90°	CODICE 120°	D h6	L	L ₁
808.902	809.1202	2	49	8
808.903	809.1203	3	50	10
808.904	809.1204	4	52	12
808.905	809.1205	5	60	15
808.906	809.1206	6	66	20
808.908	809.1208	8	79	25
808.9010	809.1210	10	89	25
808.9012	809.1212	12	102	30
808.9014	809.1214	14	115	35
808.9016	809.1216	16	115	35
808.9018	809.1218	18	130	40
808.9020	809.1220	20	131	40

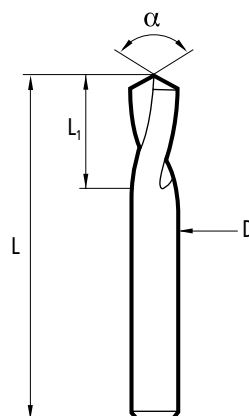


1

PUNTE A CENTRARE NC HSS - E Co 90° - 120° - Rivestimento TIN


ISO 10898

CODICE 90°	CODICE 120°	D h6	L	L ₁
810.902	811.1202	2	49	8
810.903	811.1203	3	50	10
810.904	811.1204	4	52	12
810.905	811.1205	5	60	15
810.906	811.1206	6	66	20
810.908	811.1208	8	79	25
810.9010	811.1210	10	89	25
810.9012	811.1212	12	102	30
810.9014	811.1214	14	115	35
810.9016	811.1216	16	115	35
810.9018	811.1218	18	130	40
810.9020	811.1220	20	131	40

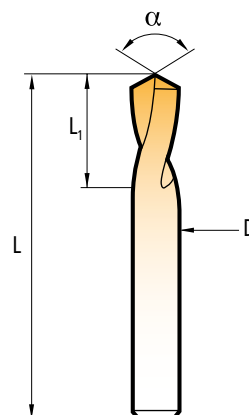

TOLLERANZE

D	α	L	L ₁
h6	+ 1°	± 1	+ 1

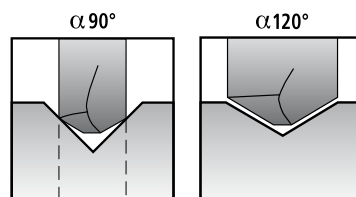

LA SCELTA IMPORTANTE

www.cagelli.com - info@cagelli.com